



<p style="text-align: center;"> SPRINGS WINDOW FASHIONS <small>the Best Experience Company</small>  Springs Window Fashions Customer Service </p>	Title:	Use If/When:
	Cellular and Pleated Cordless – Creeping Down When Shade is Raised	Cordless Cellular or Pleated shade is not staying in the raised position
Last Revised: 07/09/2015		


1. Raise shade fully. Remove shade from installation brackets using a wide flathead screwdriver or **paint scraper**. Insert tip of screwdriver or scraper between the back of the headrail and the bracket.



2. Turn shade upside down on a flat surface. Remove one end cap off the bottom rail.



3. Slide aluminum slat from bottom rail.



4. Remove bottom weights one at a time starting with center weight. Remove additional weights if needed.

