

Use If/When: Replace louver stems and realign louvers for G85 DuraVue/Duralite and G71 SuperVue/Everglide, including Angle Top and Curved/Bowed headrails

Tools Needed: Flat head screwdriver, needle nose pliers

**1.** A gear rack should be replaced with each louver stem.

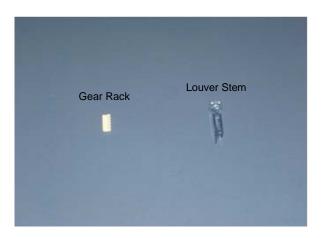

**2.** Locate the clear plastic louver stems where louvers are attached.

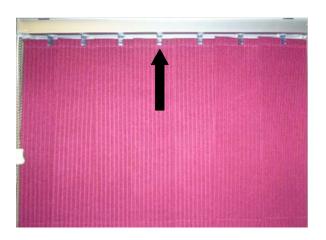

3. Rotate the louvers into the open position. Slide a hard plastic card between the louver and the long side of the stem. Push both card and louver up toward the top of the louver stem. This will unseat the louver from the louver stem.



**4.** Remove the louver by pulling down on both the louver and the plastic card at the same time. Lay the louver on a clean flat surface. Repeat for all louvers.

**Note:** If using a credit card, be careful not to damage the magnetic strip.



Page **1 of 4** Last Revised: 10/12/12

Use If/When: Replace louver stems and realign louvers for G85 DuraVue/Duralite and G71 SuperVue/Everglide, including Angle Top and Curved/Bowed headrails

Tools Needed: Flat head screwdriver, needle nose pliers


- 5. Remove headrail from mounting clips by placing the flat head of a screwdriver between the back of the headrail and the release clip on the mounting clip. Pull the handle of the screwdriver toward the front of the headrail and tilt the back of headrail down and toward you.
- **6.** Lay the headrail on a clean flat surface with louver stems pointed toward the ceiling.






- Remove stems by pushing sideways out of the horseshoe shaped opening of the carriage body. Needle nose pliers may be used to help hold the stem for removal.
- 8. Use needle nose pliers to place the gear rack into the opening of the rectangular carriage body.

  Make sure the ridged side is facing out and the points are facing down.

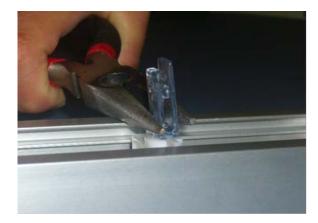

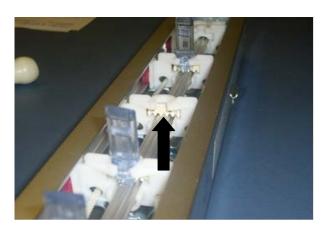


Page 2 of 4 Last Revised: 10/12/12


Use If/When: Replace louver stems and realign louvers for G85 DuraVue/Duralite and G71 SuperVue/Everglide, including Angle Top and Curved/Bowed headrails

Tools Needed: Flat head screwdriver, needle nose pliers

**9.** Rotate stems to the closed position making sure the gear rack stays in the standing position.

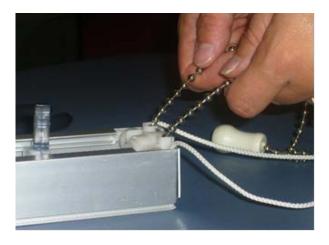

10. Be sure all louver stems are in the same position. Use needle nose pliers to slide the new stem into horseshoe shaped opening. Stems will slide in hard.

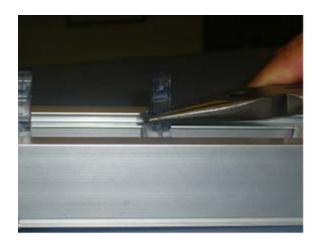

**11.** Pull the chain several times to ensure the louver stems rotate correctly.



**12.** If stems are moving out of sync, hold rotation chain stationary while turning stem counter clockwise by hand. Stems will turn hard.



Page 3 of 4 Last Revised: 10/12/12

Use If/When: Replace louver stems and realign louvers for G85 DuraVue/Duralite and G71 SuperVue/Everglide, including Angle Top and Curved/Bowed headrails

Tools Needed: Flat head screwdriver, needle nose pliers

13. Once you have confirmed that the headrail is working properly, reinstall headrail into mounting clips and reinstall louvers in the open position as pictured below. All louvers should be facing the same direction.



Page 4 of 4 Last Revised: 10/12/12